



# Designer Collection Shower Bases

## 6042MT

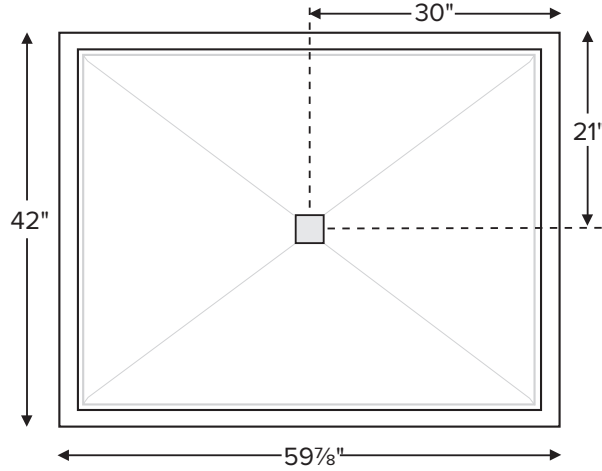

When ordering, please specify tile flange locations.

59.875" x 42" x 3" (exterior bottom of base)	
MULTIPLE, LOW-PROFILE THRESHOLD smooth floor	
Center Drain	
<b>Acrylic CXL®</b>	<b>DoloMatte®</b>
125 lbs / 57 kg	141 lbs / 64 kg

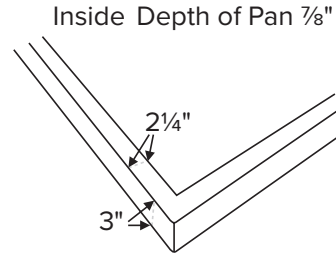

Model #	Material	Color / Finish	MSRP
SB6042MT	Acrylic CXL®	White (CWH) or Biscuit (CBS) / Gloss	<b>\$2,025</b>
SBDM6042MT	DoloMatte®	White (CWH) / Matte	<b>\$2,385</b>

Must specify color code on order. DoloMatte available in white only.

### Options *Must be ordered at time of purchase*

#### Quick Ship (QSPRI) \$430

Reduces lead time. Please call for availability.

**Radiance® (RAD100) \$1,595** Shower floor heating system. Radiance heating grids are fully integrated within the acrylic shell structure of the shower floor. Requires a 110-volt, 15 amp GFCI and remote installation of control box & keypad.

#### Pre-Levelled Foam Base (PLFSB) \$220

**PVC Drain Kit Finishes** Chrome included with shower base  
Brushed Nickel upcharge (SBSQDBN) **\$125**



Factory-installed tile flange is 3/16" thick.  
Account for this thickness when planning final opening size.

### Accessories

#### Drain Kit Options

Solid Brass Drain Kit with Stainless Steel Trim (SBSQDSB) **\$195**

#### Teak Shower Seat

Premium

Natural Stainless (TK-SSEAT2416BNS) **\$3,035**

High-Polished Stainless (TK-SSEAT2416BHP) **\$3,465**

Standard

Natural Stainless (TK-SSEAT2215NS) **\$1,125**

High-Polished Stainless (TK-SSEAT2215HP) **\$1,575**

**Teak Bath Mat (TKMAT3018) \$815** Measures 30" x 17.5" x 1"  
Custom sizes also available. Contact MTI for details.

**Teak Shower Tray (TK6042MT)**

**Contact MTI for pricing**

### IMPORTANT ORDERING & INSTALLATION INFORMATION

- Factory-installed tile flange on 1, 2 or 3 sides to facilitate installation. Must specify tile flange location(s) on order.
- 3.5" drain opening pre-drilled.
- Dimensions provided represent the length and width of the bottom of the base without tile flange. See Installation Instructions.
- Add proper wet-bedding compound to fully support bottom of shower base. Optional factory installed Pre-Levelled Foam Base negates the need to wet bed when installing on a flat, level subfloor. See installation instructions.
- All bases are in accordance with CSA B45.5/IAPMO Z124 standard and compliant with ASTM C 1028-07 coefficient of friction. DoloMatte bases meet ANSI A137.1/A326.3 coefficient of friction and AS HB198:2014 pendulum slip resistance testing.

- Options and accessories may be packaged inside the box. Always check packaging before discarding.
- All product measurements are ±1/2".
- Specifications and configurations are subject to change without notice.
- Measurements herein supersede all others published prior to publication date below.

See the Installation & Operation Manual for more details.

MTI's Customer Service: Monday-Friday 8am-6pm EST

**800-783-8827** or [service@mtibaths.com](mailto:service@mtibaths.com)

CSA # MTSB-6042MT

HURL # MTSB-DM6042MT

©2023 by MTI Baths, Inc. Modification Rights Reserved



Rev. 03 29 2023