

# SEACHROME

Seachrome Corporation  
1906 East Dominguez Street  
Long Beach, California 90810  
Phone: (800) 955-2476  
Fax: (800) 444-3380


Description:

STE1-320135-NW  
32" x 13-1/2" Tub Seat  
End Mount with Frame

Customer:

Customer Part #

10-05-2015

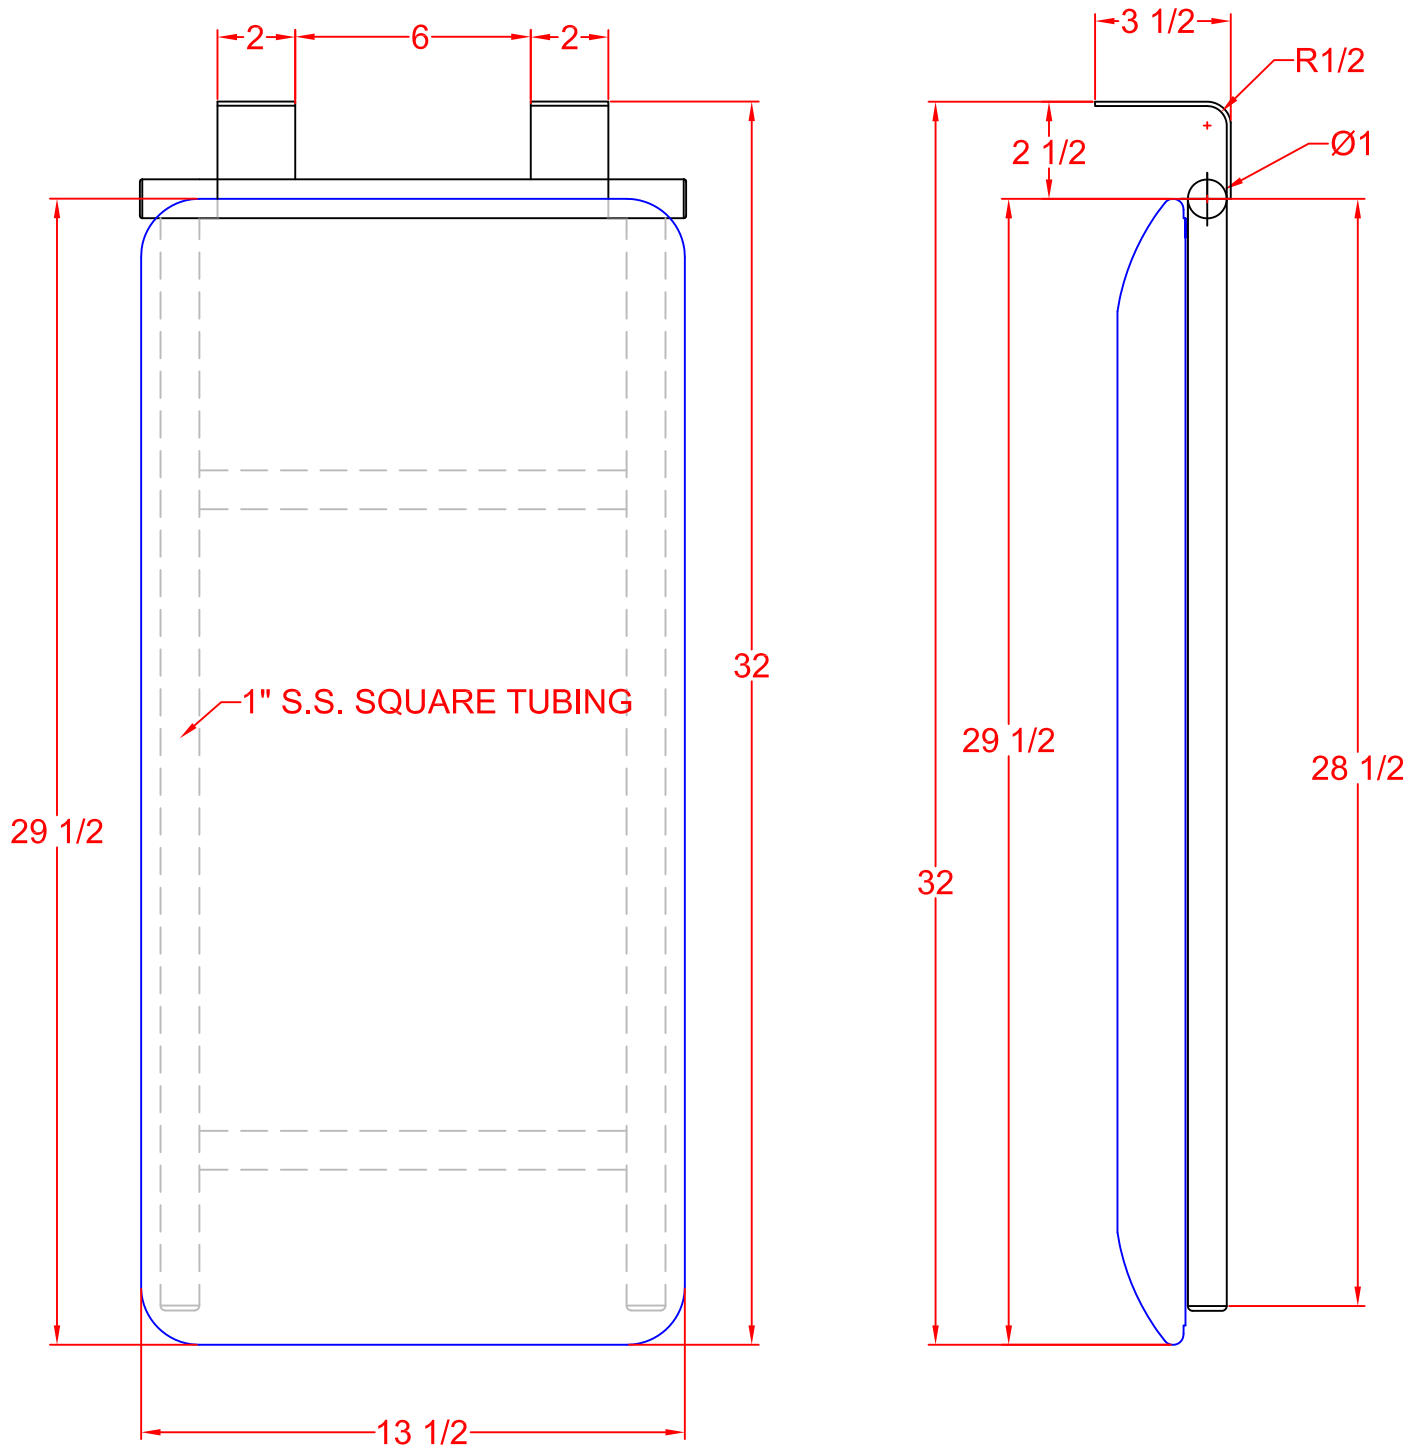

This drawing and the information contained herein is proprietary to Seachrome Corp. and shall not be reproduced, copied or disclosed in whole, or part, or used for manufacturing or for any other purpose without the written permission of Seachrome Corporation.

# SEACHROME

Seachrome Corporation  
1906 East Dominguez Street  
Long Beach, California 90810  
Phone: (800) 955-2476  
Fax: (800) 444-3380

Description:


STE1-320135-NW  
32" x 13-1/2" Tub Seat  
End Mount with Frame

Customer:

Customer Part #

10-05-2015

## SHOWER SEAT MODEL #STE1-320135-NW (End Mount Seat with Frame) (with White Naugahyde Seat)

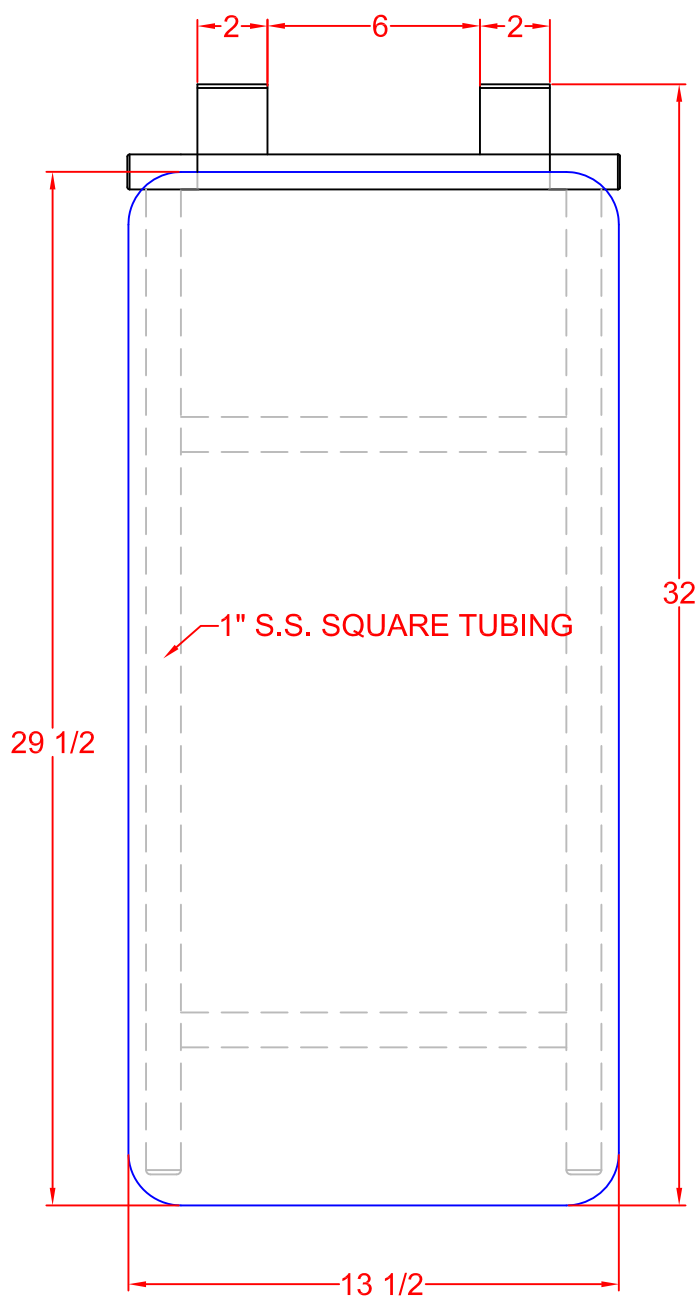

### OPERATION:

Seat is automatically held in a raised position by a stainless Hinge Bracket attached to the rear of the Tub Seat. When the seat is lowered into its down position the Seat must rest securely on the tub dam for support.

### ARCHITECTURAL SPECIFICATIONS:

Model #STE1-320135-NW Wall Hung Shower Seat from Seachrome Corp., Long Beach, California 90810. Phone: (800) 955-2476. Frame: Type 304 (18-8) S.S. tube, 1" (25mm) x 18ga. (1.2mm) sq. main frame with 1" (25mm) x 18ga. (1.2mm) sq. cross members.

### MATERIALS:

FRAME: Type 304 (18-8) S.S. tubing, 1" (25mm) x 18ga. (1.2mm) sq. main frame with 1" (25mm) x 18ga. (1.2mm) sq. cross-members.

WALL BRACKETS (2): Type 304 (18-8) S.S., 10ga. (3.4mm) x 2" (51mm) wide x 3.5" (88.9mm) long, heliarc welded to 1" (25mm) rd. x 18ga (1.2mm) Constant Friction Hinge. Three Mounting holes in each bracket.

### SEAT CHOICES:(Designate when ordering)

NW or NA - White (NW) or Almond (NA) Naugahyde covering 2" (51mm) foam mounted on 1/2" (13mm) marine plywood.

PW or PT - White (PW) or Teak (PT) Finish Phenolic 1/2" (13mm) x 3" (76mm) slats bolted to frame with S.S. screws.

### INSTALLATION:

Lay seat flat resting on both sides of tub. Set the hinge flat against the tub wall and mark holes. (Make sure bottom of hinge rests on tub surface for support).

All Shower Seats must only be installed using suitable fasteners and sufficient in-wall backing materials. ADA mounting height for lowered seat is 17" (432mm) to 19" (482mm).