

CODE NUMBER

3250472

DESCRIPTION

1.6 gpf, Brushed Stainless Finish, Single Flush, Trap Primer Outlet Tube, Battery, G2 Exposed Sensor Water Closet Flushometer.

DETAILS

Flush Volume: 1.6 gpf (6.0 Lpf)Finish: Brushed Stainless (SF)

Power Type: BatteryBattery Life: 6 yearsValve: Diaphragm

• Valve Body Material: Semi-red Brass

Fixture Type: Water Closet
Fixture Connection: Top spud
Rough-In Dimension: 11 ½" (292mm)
Spud Coupling: 1 ½" (38mm)

Supply Pipe: 1" (25mm)
Outlet Tube: Trap Primer (TP)


FEATURES

- Automatically operates by means of an infrared sensor with multiple-focused, lobular sensing fields for high and low target detection
- User-friendly, three-second flush delay and Courtesy Flush® override button
- Adjustable tailpiece
- High copper, low zinc brass castings for dezincification resistance
- Available in low consumption (1.6 gpf/6.0 Lpf), water saver (3.5 gpf/13.2 Lpf), and high efficiency (1.28 gpf/4.8 Lpf) models
- Valve body, Cover, Tailpiece and Control Stop shall be in compliance with ASTM Alloy Classification for Semi-Red Brass
- Valve shall be in compliance to the applicable sections of ASSE 1037.

VIDEOS



PVD Special Finishes

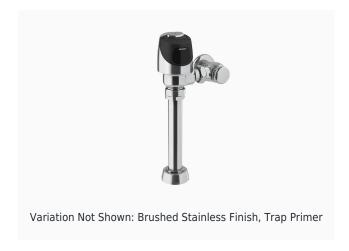

COMPLIANCES & CERTIFICATIONS







(ADA Compliant, cUPC Certified, BAA Compliant)

RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi-Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

ELECTRICAL SPECIFICATIONS

• Battery Life: 6 years

VALVE OPERATING PRESSURE (FLOWING)

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

DOWNLOADS

- Optima Plus Valve Installation Instructions
- G2 Repair and Maintenance Guide
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Sloan Optima Plus Repair and Maintenance Guide
- Additional Downloads

NOTES

All information contained within this document subject to change without notice.


Looking for other variations of the G2 8111 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.
Find a compatible water closet for this flushometer.

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com




ROUGH-IN

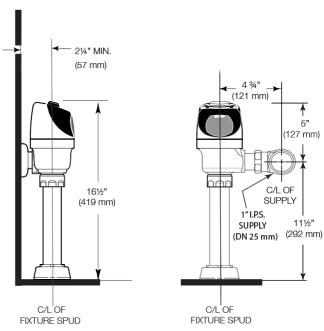

ALTERNATE ADA INSTALLATION

Lower water supply rough-in to 10" (254 mm) and mount grab bar at the 36" (914 mm) maximum allowed height (top of grab bar at 36").

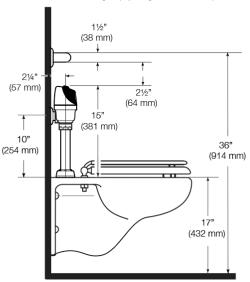

WHEN INSTALLING IN A HANDICAP STALL:

Per the ADA Guildlines (section 604.9.4) it is recommended that the grab bars be split or shifted to the wide side of the stall. If grab bars must be present over the valve, use the alternate ADA installation as shown to the right.

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com