

### **CODE NUMBER**

3918758

### **DESCRIPTION**

3.5 gpf, Rough Brass Finish, Single Flush, Royal® Concealed Manual Specialty Urinal Hydraulic Flushometer.

#### **DETAILS**

• Flush Volume: 3.5 gpf (13.2 Lpf)

• Finish: Rough Brass (RB)

• Valve: Diaphragm

• Valve Body Material: Semi-red Brass

• Fixture Type: Urinal

• Fixture Connection: Rear spud

• Rough-In Dimension: 14 ½" (368mm)

• Spud Coupling: 1 ½" (38mm)

• Supply Pipe: 1" (25mm)

#### **FEATURES**

- PERMEX® Synthetic Rubber Diaphragm with Dual Filtered Fixed Bypass
- Non-Hold-Open Actuator, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation.
- Vacuum Breaker
- Non-Hold-Open Push Button, Fixed Metering Bypass and No External Volume Adjustment to Ensure Water Conservation
- ADA Compliant Non-Hold-Open Actuator
- Handle Packing, Main Seat, Stop Seat and Vacuum Breaker Molded from PERMEX® Rubber Compound for Chloramine resistance
- Elbow Flush Connection and Coupling for 11/2" NPT Back Inlet (for connection in the pipe chase — flush connection through the wall not provided by Sloan)
- 1" I.P.S. Wheel Handle Bak-Chek® Angle Stop
- Actuator not included, order separately. Specify actuator type based on Hydraulic Push Button Options



### **COMPLIANCES & CERTIFICATIONS**





(UPC Certified, BAA Compliant)

### RECOMMENDED SPECIFICATION

Valve Body, Cover, Tailpiece and Control Stop shall be in conformance with ASTM Alloy Classification for Semi- Red Brass. Valve shall be in compliance with the applicable sections of ASSE 1037 and ANSI/ASME 112.19.2.

## **VALVE OPERATING PRESSURE (FLOWING)**

15–80 PSI (103–552 kPa). Specific fixtures may require greater minimum flowing pressure - consult manufacturer requirements.

### **DOWNLOADS**

- Sloan Stainless Steel Installation Instructions
- Control Stop Repair and Maintenance Guide
- Flush Connections Flanges Repair and Maintenance Guide
- Tail Piece Repair and Maintenance Guide
- Series 900 Flushometers Repair and Maintenance Guide
- Hydraulic Push Button Options
- Additional Downloads

## **NOTES**


All information contained within this document subject to change without notice.

Looking for other variations of the ROYAL 9609 product? View the general spec sheet with all options.

Find a compatible urinal for this flushometer.
Find a compatible water closet for this flushometer.



# **ROUGH-IN**

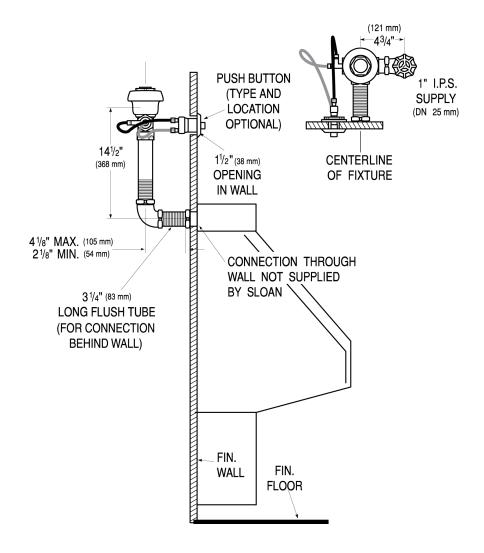

Phone: 800.982.5839 • Fax: 800.447.8329 • sloan.com